
# 28990945 Superdex<sup>™</sup> 200 Increase 5/150 GL

# 28990944 Superdex 200 Increase 10/300 GL

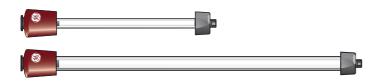

Read these instructions carefully before using the columns.

## Intended use

Superdex 200 Increase 5/150 GL and Superdex 200 Increase 10/300 GL columns are intended for research use only, and shall not be used in any clinical or *in vitro* procedures for diagnostic purposes.

## Safety

For use and handling of the products in a safe way, refer to the Safety Data Sheet.

## **Quick information**

Superdex 200 Increase 5/150 GL and Superdex 200 Increase 10/300 GL are prepacked Tricorn™ glass columns.

Superdex 200 Increase 5/150 GL is for rapid size analysis of proteins and other biomolecules. Short cycle times, together with small sample volume and low consumption of buffer make this column ideal for use in screening experiments to check protein homogeneity.

Superdex 200 Increase 10/300 GL is suitable for small scale preparative purification ( $\mu$ g mg) as a final polishing step, as well as for protein analysis and characterization.

The columns are supplied with two fingertight connectors 1/16" male for connection to  $\ddot{A}KTA^{TM}$  or other systems.

## Table 1. Resin data

| Matrix   | Composite of cross-linked agarose and dextran |
|--|---|
| Particle size, d <sub>50v</sub> 1                          | ~ 8.6 µm                                      |
| Exclusion limit (M <sub>r</sub> )                          | ~ 1.3 × 10 <sup>6</sup>                       |
| Fractionation range<br>globular proteins (M <sub>r</sub> ) | 10 000 to 600 000                             |
| dextrans (M <sub>p</sub> )                                 | 1000 to 100 000                               |
| pH stability range   |   |
| operational <sup>2</sup>                                   | 3 to 12                                       |
| CIP <sup>3</sup>   | 1 to 14                                       |
| Temperature  |   |
| operational  | 4°C to 40°C                                   |
| storage  | 4°C to 30°C                                   |

<sup>1</sup> Median particle size of the cumulative volume distribution.

<sup>2</sup> pH range where resin can be operated without significant change in function.

pH range where resin can be subjected to cleaning- or sanitization-in-place without significant change in function.



#### Table 2. Column data

|  | 5/150  | 10/300                                       |
|--|--|--|
| Bed dimensions (mm)                                | 5 x 153-158                                  | 10 × 300-310                                 |
| Approximate bed volume (mL)                        | 3  | 24   |
| Column efficiency (N/m)                            | > 42 000                                     | > 48 000                                     |
| Typical pressure drop over packed bed <sup>1</sup> | 3.0 MPa <sup>2</sup><br>(30 bar,<br>435 psi) | 3.0 MPa <sup>2</sup><br>(30 bar,<br>435 psi) |
| Column hardware pressure limit                     | 10 MPa,<br>(100 bar,<br>1450 psi)            | 5.0 MPa,<br>(50 bar,<br>725 psi)             |

Determine the limit according to Section Setting column pressure limits.
At maximum flow rate at 25°C in water.

#### Table 3. Flow rate limits and recommendations Superdex 200 Increase 5/150 GL

|                                 | Flow rate<br>(mL/min)   |
|---------------------------------|---|
| Recommended flow rate, water    | 0.45  |
| Maximum flow rate, water        | 0.75  |
| Maximum flow rate, 20% ethanol  | 0.35  |
| Maximum flow rate, 10% glycerol | 0.35  |
| Maximum flow rate, water        | 0.35  |
| Maximum flow rate, 20% ethanol  | 0.17  |
| Maximum flow rate, 10% glycerol | 0.17  |
|                                 | Maximum flow rate, water<br>Maximum flow rate, 20% ethanol<br>Maximum flow rate, 10% glycerol<br>Maximum flow rate, water<br>Maximum flow rate, 20% ethanol |

## Table 4. Flow rate limits and recommendations Superdex 200 Increase 10/300 GL

| Temperature  |                                 | Flow rate<br>(mL/min) |
|--------------|---------------------------------|-----------------------|
| 20°C to 25°C | Recommended flow rate, water    | 0.75                  |
|              | Maximum flow rate, water        | 1.80                  |
|              | Maximum flow rate, 20% ethanol  | 0.90                  |
|              | Maximum flow rate, 10% glycerol | 0.90                  |
| 4°C to 8°C   | Maximum flow rate, water        | 0.90                  |
|              | Maximum flow rate, 20% ethanol  | 0.45                  |
|              | Maximum flow rate, 10% glycerol | 0.45                  |

**Note:** Most water-based buffers can be considered to be similar to water, for example phosphate and Tris buffers.

**Note:** When running viscous samples (for example containing glycerol) it is important to lower the flow rate, see recommendations above.

## First-time use



Fig 1. Illustration of how to lock the adapter. The locking ring (black) must be in the down-position to prevent uncontrolled adjustment of the column's bed height.

Before connecting the column to a chromatography system, make sure there is no air in the tubing and valves. Remove the storage/ shipping device, see Section *Delivery/storage*, and the stop plug from the column. Check that the upper adapter is locked (locking ring pressed down, see Fig. 1). Make sure that the column inlet is filled with liquid and connect it drop-to-drop to the system. For maximum resolution especially on the 5/150 column, minimize dead volumes between the injection valve and the column as well as between the column outlet and the detector.

Prepare the column for first-time use as follows:

**Note:** Buffer solution, column and system should be kept at the same temperature when operating.

a) Equilibrate with at least 2 column volumes (CV) of room tempered water at a flow rate of 0.30 mL/min (5/150) or 0.75 mL/min (10/300). Be aware to lower the flow rate if run at lower temperature.

b) Set pressure limits for the column in your method according to Section Setting column pressure limits.

c) Equilibrate with at least 2 CV eluent at a flow rate of 0.30 mL/min (5/150) or 0.75 mL/min (10/300).

d) It is recommended to perform a column performance control for future comparisons, see Section *Column performance control*.



#### NOTICE

Make sure to not exceed the pressure limits of the column. Take extra care when working at low temperatures, like in a cold room, or when the column

is used with 20% ethanol or other viscous solutions. Decrease the flow rate according to Table 3 or Table 4. Set pressure limits according to Section *Setting column pressure limits*.

## Setting column pressure limits


There are two pressure limits to consider when running the column, the pressure drop over the packed bed and the column hardware pressure limit. The pressure drop over the packed bed differs for each column and the limit has to be individually set **as the columns are packed to withstand the maximum flow rate.** Note that it might be different compared to the value noted in Table 2.

Exceeding any pressure limit may lead to collapse of the column bed or damage to the column hardware. Increased pressure may for example be generated by one or a combination of the following parameters:

- Eluent or sample with high viscosity compared to water. This includes 20% ethanol.
- Low temperature compared to room temperature.

• Modifications to the flow path, for example changing to thinner or longer tubing.

For optimal functionality it is important to know the pressure drops over different parts of your system and how they affect the column. All ÄKTA chromatography systems measure pressure at the system pump,  $\mathbf{p}_{pump}$  (see Fig. 2). Some systems have additional pressure sensors located before and after the column,  $\mathbf{p}_{pre-c}$  and  $\mathbf{p}_{post-c}$ .

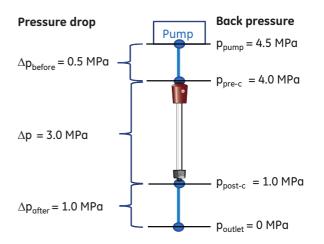

- Fig 2. Example of the pressure in different parts of a system during run of a column.
- $\Delta \mathbf{p}_{before}$  does not affect the column.
- The pressure on the column hardware is the sum of  $\Delta p_{after}$ and  $\Delta p$  (on some systems monitored separately as  $p_{pre-c}$ ). Do not exceed the column hardware limit!
- $\Delta \mathbf{p}$ , is individual for each column and needs to be determined.

For more information, refer to the ÄKTA laboratory-scale Chromatography Systems Instrument Management Handbook.

## How to set pressure limit for ÄKTAexplorer, ÄKTApurifier, ÄKTAmicro, and other systems with a pressure sensor in the pump

Determination of column specific pressure drop over the packed bed,  $\Delta {\bm p}$  (see Fig. 2):

- 1  $\Delta \mathbf{p_{before}}$  is measured in absence of the column. Run the pump at <u>maximum flow rate</u> of the column in water and at the temperature for the experimental conditions. For exact values, see Table 3 or Table 4. Let the flow drip from the tubing that will later be connected to the column. Note the pressure as  $\Delta \mathbf{p_{before}}$ .
- 2 Check that the *Pressure Alarm* in software is set to the same as the <u>Column hardware pressure limit</u>.
- 3 Connect the column to the system. Let the flow drip from the column outlet. The column should be equilibrated in water and at the temperature for the experimental conditions. Run the pump at the same flow rate as in step 1. Note the pressure value.
- $\begin{array}{ll} 4 & \Delta \pmb{p} \text{ is calculated as the pressure value in step 3 minus } \Delta \pmb{p}_{before}.\\ & \text{The } \Delta \pmb{p} \text{ value will be used in step 8 below.} \end{array}$

This  $\Delta \boldsymbol{p}$  should not be exceeded at any temperature or using any liquid.

Setting pressure limit in method at your <u>experimental conditions</u> (intended system setup, flow rate, temperature and eluent):

- 5  $\Delta \mathbf{p_{before}}$  is measured in absence of the column. Run the pump at your <u>intended flow rate</u>. Let the flow drip from the tubing that will later be connected to the column. Note the pressure as  $\Delta \mathbf{p_{before}}$ .
- 6 Instead of the column, connect a piece of tubing<sup>1</sup> to the system. Run the pump at the same conditions as in step 5. Note the pressure value as the <u>total system pressure</u>.
- 7  $\Delta \mathbf{p}_{ofter}$  is calculated as the <u>total system pressure</u> value noted in step 6 minus  $\Delta \mathbf{p}_{before}$ , noted in step 5.
- 8 Calculate  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after} + \Delta \mathbf{p}_{before}$ 
  - If this value is lower than the <u>Column hardware pressure</u> <u>limit</u> (see Table 2), set the pressure limit in your method as  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after} + \Delta \mathbf{p}_{before}$ .
  - If  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after}$  exceeds the column hardware pressure limit, reduce the flow rate or  $\Delta \mathbf{p}_{after}$ . Repeat step 5-8.

You can now start your experiment!

# How to set pressure limit for ÄKTA pure, without a column valve or with Column Valve V9-Cs (1 column)

**p**<sub>pre-c</sub> (see Fig. 2) is automatically monitored by the system. This is the pressure signal to use in the following instruction. Do not use the *System pressure* signal. Note that the measured values include the tubing used to connect the column to the instrument.

Determination of column specific pressure drop over the packed bed  $(\Delta \mathbf{p})$ :

- 1 Check that the *Alarm pre column pressure* in software is set to the same as the <u>Column hardware pressure limit</u> (see Table 2).
- 2 Connect the column to the system. Let the flow drip from the column outlet. The column should be equilibrated in water and at the temperature for the experimental conditions. Run the pump at <u>maximum flow rate</u> of the column in water and at the temperature for the experimental conditions. For exact values, see Table 3 or Table 4.

Note the pressure value.

The now measured  $p_{pre-c}$  value is the maximum pressure over the packed bed,  $\Delta p$  (*DeltaC pressure*).

3 This  $\Delta \mathbf{p}$  value should not be exceeded at any temperature or with any liquid!

Setting pressure limit in method at your <u>experimental conditions</u> (intended system setup, flow rate, temperature and eluent):

- 4  $\Delta p_{after}$  is measured in absence of the column. Run the pump at your <u>intended flow rate</u>.
- 5 Instead of the column, connect a piece of tubing<sup>1</sup> to the system, or bypass the column if connected to a valve. Run the pump at your intended flow rate. The now measured value is  $\Delta p_{after}$ .
- 6 Calculate  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after}$ .
  - If this value is lower than the <u>Column hardware pressure</u> <u>limit</u> (see Table 2), set the pressure limit in your method, *Alarm pre column pressure*, as  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after}$

- If  $\Delta \mathbf{p} + \Delta \mathbf{p}_{after}$  exceeds the column hardware pressure limit, reduce the flow rate or  $\Delta \mathbf{p}_{after}$ . Repeat step 4-6.

You can now start your experiment!

# How to set pressure limit for ÄKTA avant and ÄKTA pure with Column Valve V9-C (5 columns)

**Note:** This is not an optimal high performance setup. See Sections "System recommendations" and "System dead volumes" for more details.

 $\Delta p$  and  $p_{pre-c}$  (see Fig. 2) are automatically monitored by the system.

- **Note:** The measured values include the tubing used to connect the column to the instrument.
- 1 Check that the *Alarm pre column pressure* is set to the same as the <u>Column hardware pressure limit</u> (see Table 2).
- 2 Connect the column to the system. The column should be equilibrated in water and at the temperature for the experimental conditions.

Start running the column at a low flow rate. Slowly increase the flow until the maximum flow rate for the column under these conditions or the limit set in step 1 is reached. For exact maximum flow rates under different conditions, see Table 3 or Table 4. Note the pressure over the packed bed,  $\Delta \mathbf{p}$  (delta-column pressure), and set the value as Alarm Delta column pressure.

This  $\Delta \boldsymbol{p}$  should not be exceeded at any temperature or with any liquid.

You can now start your experiment!

## Column performance control

In order to detect any changes in column performance, it is very important that you make an initial test with your particular system configuration. Note that the contribution from dead volumes in the instrument to band broadening will vary depending on system set-up and will influence column efficiency, thus the obtained efficiency on your system might be lower compared to the specifications in Table 2.

## Column efficiency test

Column efficiency, expressed as the number of theoretical plates per meter, N/m, is calculated using the following equation:

 $N/m=5.54 \times (V_R / W_h)^2 /L$ 

where

L

- N/m = number of theoretical plates/meter
- $V_R$  = volume eluted from the start of sample application to the peak maximum
- $W_h$  = peak width measured as the width of the recorded peak at half of the peak height
  - = bed height (m)

## Column Superdex 200 Increase 5/150 GL

Check the performance of the column using the following procedure:

| Sample:    | 10 µL 2% acetone (20 mg/mL) in buffer or water |
|------------|--|
| Eluent:    | Buffer or water                                |
| Flow rate: | 0.30 mL/min, room temperature                  |
| Detection: | 280 nm   |

## Column Superdex 200 Increase 10/300 GL

Check the performance of the column using the following procedure:

| Sample:    | 100 µL 2% acetone (20 mg/mL) in buffer or water |
|------------|---|
| Eluent:    | Buffer or water                                 |
| Flow rate: | 1.0 mL/min, room temperature                    |
| Detection: | 280 nm  |

## **Function test**

As an alternative to the above efficiency test, check the column performance by running a function test.

#### Column Superdex 200 Increase 5/150 GL

Sample:

- 1. Thyroglobulin (M<sub>r</sub> 669 000) 3 mg/mL
- 2. Aldolase (M<sub>r</sub> 158 000) 3 mg/mL
- 3. Conalbumin (M $_{\rm r}$  75 000) 3 mg/mL
- 4. Carbonic anhydrase (M $_{\rm r}$  29 000) 3 mg/mL
- 5. Ribonuclease A (M $_{\rm r}$  13 700) 3 mg/mL

| Sample volume: | 10 µL  |
|----------------|--|
| Eluent:        | 0.01 M phosphate buffer, 0.14 M NaCl, pH 7.4 |
| Flow rate:     | 0.45 mL/min, room temperature                |
| Detection:     | 280 nm                                       |

Result is shown in Fig. 3.

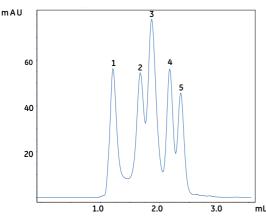


Fig 3. Typical chromatogram from a function test of Superdex 200 Increase 5/150 GL using ÄKTAmicro.

#### Column Superdex 200 Increase 10/300 GL

Sample:

- 1. Thyroglobulin (M<sub>r</sub> 669 000) 3 mg/mL 2. Ferritin (M<sub>r</sub> 440 000) 0.3 mg/mL
- 2. Fernun (M<sub>r</sub> 440 000) 0.5 mg/mL
- 3. Aldolase (M<sub>r</sub> 158 000) 3 mg/mL
- 4. Conalbumin (M<sub>r</sub> 75 000) 3 mg/mL
- 5. Ovalbumin (M $_{\rm r}$  44 000) 3 mg/mL
- 6. Carbonic anhydrase (M<sub>r</sub> 29 000) 3 mg/mL
- 7. Ribonuclease A (M<sub>r</sub> 13 700) 3 mg/mL

| Sample volume: | 100 µL                                       |
|----------------|--|
| Eluent:        | 0.01 M phosphate buffer, 0.14 M NaCl, pH 7.4 |
| Flow rate:     | 0.75 mL/min, room temperature                |
| Detection:     | 280 nm                                       |
|                |  |

Result is shown in Fig. 4.

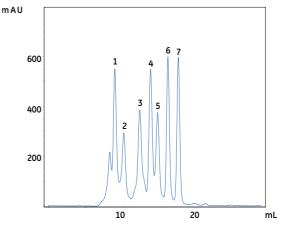


Fig 4. Typical chromatogram from a function test of Superdex 200 Increase 10/300 GL using ÄKTApurifier.

## Try these conditions first

| Eluent:                          | 0.01 M phosphate buffer, 0.14 M NaCl, pH 7.4 |
|----------------------------------|--|
| Flow rate:<br>(room temperature) | 0.45 mL/min (5/150);<br>0.75 mL/min (10/300) |
| Sample volume:                   | 10 μL (5/150);<br>100 μL (10/300)            |

Equilibration is not necessary between runs with the same buffer. Read the Section *Optimization* for information on how to optimize a separation.

## Sample recommendations

| Molecular weight (M <sub>r</sub> ): | 10 000 to 600 000  |
|-------------------------------------|--|
| Protein concentration:              | Up to 50 mg/mL in sample, for higher resolution below 10 mg/mL.  |
| Sample volume:                      | 4 to 50 μL (5/150)<br>25 to 500 μL (10/300)  |
| Preparation:                        | Dissolve the sample in eluent, filter<br>through a 0.22 µm filter or centrifuge at<br>10 000 g for 10 min. |

**Note:** High sample viscosity (high protein concentration or additives) can cause instability of the separation and the back pressure might increase. Dilute sample or decrease flow rate during sample application.

## System recommendations

The small bed volume of the 5/150 column makes it sensitive to dead volumes in the system. For this column it is recommended to use systems like ÄKTApurifier 10, ÄKTA pure 25 without the column valve V9-C (5 columns), ÄKTAmicro, or similar. Use short, narrow capillaries and avoid all unnecessary components in the flow path. For optimal configuration of ÄKTA pure 25, see Cue Cards in the Literature list in Section Ordering Information.

Note: Be aware of pressure limits.

The 10/300 column has a larger bed volume and can be used in systems like ÄKTAexplorer 10 and ÄKTA avant 25 in addition to the systems mentioned above. Consider actions to reduce system dead volumes if sufficient performance is not achieved

ÄKTA start is not compatible with Superdex 200 Increase columns due to too low maximum operating pressure.

## Chromatogram 5/150 column on different systems

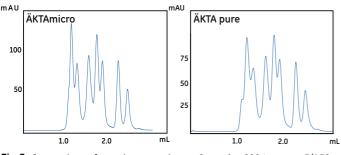
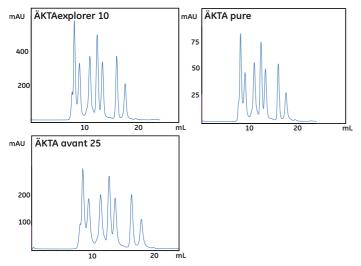


Fig 5. Comparison of protein separation on Superdex 200 Increase 5/150 on different systems. Due to different UV cells for the systems, mAU scales differ.

## Chromatogram 10/300 column on different systems



**Fig 6.** Comparison of protein separation on Superdex 200 Increase 10/300 on different systems. Due to different UV cells for the systems, mAU scales differ.

## Delivery/storage

The column is delivered with a storage/shipping device that prevents it from drying out. The column is equilibrated with degassed 20% ethanol.

If the column is to be stored for more than 2 days after use, wash the column with 2 column volumes (CV) of water and then equilibrate with at least 2 CV 20% ethanol.

Note: Use a lower flow rate for 20% ethanol. See Table 3 or Table 4,

We recommend that you connect the storage/shipping device according to Section *How to connect the storage/shipping device* for long term storage.

## Troubleshooting

## Sumptom

| Symptom  | Remedy  |
|--|---|
| Increased back pressure<br>over the column and/or loss<br>of resolution. | Confirm that the column is the cause (see<br>below). If so, clean it according to the pro-<br>cedure described in the Section<br><i>Cleaning in place (CIP)</i> .   |
| Air in the column  | To confirm that the high back pressure in<br>the system is caused by the column, dis-<br>connect one piece of equipment at a time<br>(starting at the fraction collector) with the<br>pumps running. Check the pressure<br>reading after each piece has been discon-<br>nected to determine the source of the<br>back-pressure.<br>Note that small amounts of air will nor-<br>mally not affect the performance of the<br>column. Run 3 to 4 column volumes (CV)<br>of well de-gassed eluent in an<br>upflow direction at a flow rate of<br>0.2 mL/min (5/150) or 0.5 mL/min (10/300) |
|  | at room temperature.  |
| Space between gel bed and adapter  | Turn down the adapter to the gel bed.<br>Perform a Column performance control.  |

#### How to remove the storage/shipping device

- 1 Push down the spring-loaded cap.
- 2 Remove the locking pin.
- 3 Release the cap and unscrew the device.

#### How to refill the storage/shipping device

- 1 Connect a syringe or pump to the storage/shipping device and fill with 20% ethanol over the mark on the tube. Remove the syringe or connection to the pump.
- 2 Tap out air bubbles and push the plunger to the mark on the device.

# How to connect the storage/shipping device

- 1 Fill the column inlet and luer connector with 20% ethanol and connect the filled storage/shipping device drop-to-drop to the top of the column.
- 2 Mount the spring-loaded cap (2) and secure it with the locking pin(3).

The glass tube is coated with a protecting plastic film. Small quantities of air may occasionally be trapped between the glass and the film during manufacture. The resulting uneven surface does not affect column performance or durability.

## Choice of eluent

Select an eluent that ensures the sample is fully soluble. Also try to choose an eluent that will simplify downstream applications. For example, if the proteins/peptides are to be lyophilized, a volatile eluent is necessary. Since ionic interactions can occur with both acidic and basic proteins at very low salt concentrations, a recommended buffer is 0.01 to 0.05 M sodium phosphate with additional 0.15 M NaCl, pH 7.4. Table 5 lists some useful eluent compositions.

## Table 5. Useful eluent compositions

| рН   | Buffer/eluent  | Properties/application examples  |
|------|--|--|
| 5.0  | 0.1 M ammonium acetate                               | Good solubility for some enzymes,<br>e.g., cellulases. Volatile.   |
| 6.8  | 0.2 M sodium phosphate                               | Suitable for some antibody separa-<br>tions.   |
| 7.2  | 0.05 M phosphate<br>+ 0.15 M NaCl                    | Physiological conditions.  |
| 7.8  | 0.15 M ammonium<br>hydrogen carbonate                | Suitable for some DNA and protein<br>separations. Volatile. Should be<br>used fresh.                         |
| 8.0  | 0.1 M Tris-HCl,<br>0.001 M EDTA                      | Very good solubility for DNA and RNA.  |
| 8.6  | 6 M guanidine<br>hydrochloride in<br>0.05 M Tris-HCl | Good UV-transparency.<br>Suitable if there is a need to purify<br>proteins under denaturing condi-<br>tions. |
| 11.5 | 0.05 M NaOH  | Good solubility for some com-<br>pounds.   |

#### **Buffer additives**

| Up to 8 M urea (pH<7)       | Good solubility for many compo-<br>nents. Biological activity can be<br>maintained at lower urea contents.<br>Certain risk for carbamylation of<br>proteins. |
|-----------------------------|--|
| 6 M guanidine hydrochloride | Molecular weight determinations of<br>subunits.  |
| 0.1% SDS, Tween™ or similar | Good solubility for some proteins,<br>e.g., membrane proteins. Make sure<br>you equilibrate completely with the<br>detergent solution.                       |
| 0.2 M arginine              | Decrease tendency of aggregation.  |
|                             |  |

## Buffers and solvent resistance

Degas and filter all solutions through a 0.22  $\mu m$  filter. Install an on-line filter before the injection valve.

**Note:** Buffers and solvents with increased viscosity will affect the back pressure. Reduce the flow rate if necessary. See Table 3 or Table 4.

#### Long term use

Long term use refers to use where the resin is stable over a long period of time without adverse side effects on its chromatographic performance.

- All commonly used aqueous buffers, pH 3 to 12
- Urea, up to 8 M
- Ionic and nonionic detergents
- Guanidine hydrochloride, up to 6 M

#### Short term use

Short term use refers to the use during regeneration, cleaning-inplace, and sanitization procedures.

- Acetonitrile, up to 30%
- Sodium hydroxide, up to 1 M
- Ethanol, up to 70%
- Methanol, up to 100%
- Acetic acid, up to 1 M
- Isopropanol, up to 30%
- Hydrochloric acid, up to 0.1 M
- Trifluoroacetic acid, up to 10%
- Formic acid, up to 70%

#### Avoid:

- Oxidizing agents
- Unfiltered solutions

## Optimization

If your results are unsatisfactory, consider the following actions.

## Flow rate

Action: Decrease the flow rate.

**Effect:** Improves resolution for high molecular weight components. The resolution for small components may be decreased.

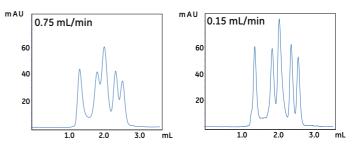


Fig 7. Comparison of protein separation on Superdex 200 Increase 5/150 at different flow rates.

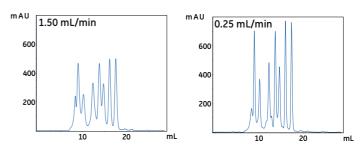


Fig 8. Comparison of protein separation on Superdex 200 Increase 10/300 at different flow rates.

#### Sample volume

Action: Decrease the sample volume.

Effect: Improves resolution.

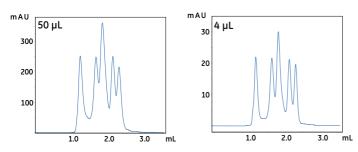


Fig 9. Comparison of protein separation on Superdex 200 Increase 5/150 using different sample volumes.

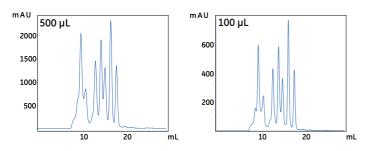


Fig 10. Comparison of protein separation on Superdex 200 Increase 10/300 using different sample volumes.

## System dead volumes

Action: Decrease system dead volumes.

Effect: Improves resolution.

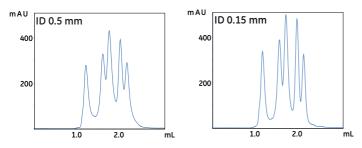


Fig 11. Comparison of protein separation on Superdex 200 Increase 5/150 using different diameters of a 32 cm long capillary connected to the column.

## Organic solvent

Action: Add organic solvent.

**Effect:** Increases solubility of hydrophobic compounds. Changes selectivity.

#### Columns in series (Superdex 200 Increase 5/150)

Action: Connect two columns in series.

**Effect:** Increases resolution due to increased bed height. Back pressure will increase. Be sure not to exceed maximum pressure limits.

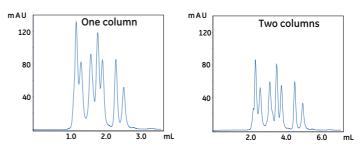


Fig 12. Comparison of protein separation on one or two Superdex 200 Increase 5/150 connected in series.

For more information, refer to the handbook *Gel filtration*, *Principles* & *Methods*.

## Cleaning-in-place (CIP)

Perform the following regular cleaning cycle after 10 to 20 separation cycles.

Note: When performing CIP, reversed flow is recommended.

## **Regular cleaning:**

- 1 Wash the column with 1 column volume (CV) of 0.5 M sodium hydroxide alternatively 0.5 M acetic acid at a flow rate of 0.13 mL/min (5/150) or 0.5 mL/min (10/300).
- 2 Immediately rinse the column with 1 CV water followed by at least 2 CV eluent at a flow rate of 0.13 mL/min (5/150) or 0.5 mL/min (10/300).

Before the next run, equilibrate the column until the UV baseline and pH are stable. Check the column according to Section *Column performance control* that the performance is restored.

## More rigorous cleaning:

- Depending on the nature of the contaminants, one of the cleaning solutions in the Section *Buffers and solvent resistance* may be used. Always rinse with at least 2 CV water after any of the cleaning solution has been used.
- If column performance is not restored, wash the column with 3 CV 0.5 M arginine. Rinse with at least 2 CV water.
- If column performance is still not restored, inject a solution of 1 mg/mL pepsin in 0.1 M acetic acid containing 0.5 M NaCl and leave overnight at room temperature or one hour at 37°C. After enzymatic treatment, clean the column according to the procedure described in the Section *Regular cleaning*.
- Change the filter at the top of the column. (Since contaminants are introduced with the liquid flow, many of them are caught by the filter). Instructions for changing the filter are supplied with the Filter Kit. Perform a regular cleaning as described above.
- If necessary, suspend 2 to 3 mm of the top of the gel bed and remove it with a Pasteur pipette. Adjust the adaptor to eliminate the space above the gel.

## Ordering information

| Product                         | Quantity | Product code |
|---------------------------------|----------|--------------|
| Superdex 200 Increase 5/150 GL  | 1        | 28990945     |
| Superdex 200 Increase 10/300 GL | 1        | 28990944     |

## **Related products**

| Product                            | Quantity | Product code |
|------------------------------------|----------|--------------|
| Superdex 200 Increase 3.2/300      | 1        | 28990946     |
| Superose 6 Increase 10/300 GL      | 1        | 29091596     |
| Superose 6 Increase 5/150 GL       | 1        | 29091597     |
| Superose 6 Increase 3.2/300        | 1        | 29091598     |
| Superdex 30 Increase 10/300 GL     | 1        | 29219757     |
| Superdex 30 Increase 3.2/300       | 1        | 29219758     |
| Superdex 75 Increase 10/300 GL     | 1        | 29148721     |
| Superdex 75 Increase 5/150 GL      | 1        | 29148722     |
| Superdex 75 Increase 3.2/300       | 1        | 29148723     |
| Gel filtration LMW Calibration Kit | 1        | 28403841     |
| Gel filtration HMW Calibration Kit | 1        | 28403842     |

## Accessories

| Product  | Quantity | Product code |
|--|----------|--------------|
| Tricorn 10 Filter Kit <sup>1</sup>             | 1        | 29053612     |
| Tricorn 5 Filter Kit <sup>1</sup>              | 1        | 29053586     |
| Filter tool                                    | 1        | 18115320     |
| Fingertight connector, 1/16" male              | 10       | 18111255     |
| Tricorn storage/shipping device                | 1        | 18117643     |
| <sup>1</sup> Do not store exposed to daylight. |          |              |

Literature

| Document   | Product code |
|--|--------------|
| Size Exclusion Chromatography, Principles & Methods                            | 18102218     |
| ÄKTA laboratory-scale Chromatography Systems<br>Instrument Management Handbook | 29010831     |
| Procedure: Maintenance and cleaning of size exclusion chromatography columns   | 29140760     |
| Cue Cards: Optimal configuration of ÄKTA pure 25 for small scale SEC           | 29181181     |
|  |              |

For local office contact information, visit www.gelifesciences.com/contact

GE Healthcare Bio-Sciences AB Björkgatan 30 751 84 Uppsala Sweden

www.gelifesciences.com

GE, the GE Monogram, ÄKTA, Superdex, and Tricorn are trademarks of General Electric Company. Tween is a trademark of Croda Group of Companies.

All other third party trademarks are the property of their respective owner.

© 2013-2018 General Electric Company

All goods and services are sold subject to the terms and conditions of sale of the company within GE Healthcare which supplies them. A copy of these terms and conditions is available on request. Contact your local GE Healthcare representative for the most current information.

GE Healthcare UK Ltd Amersham Place, Little Chalfont, Buckinghamshire, HP7 9NA, UK

GE Healthcare Europe GmbH Munzinger Strasse 5, D-79111 Freiburg, Germany GE Healthcare Bio-Sciences Corp

GE Healthcare Bio-Sciences Corp. 100 Results Way, Marlborough, MA 01752, USA

GE Healthcare Japan Corporation Sanken Bldg. 3-25-1, Hyakunincho, Shinjuku-ku, Tokyo 169-0073, Japan

